

BIGFOOT®



Bigfoot® Monster Jeep Battery Operated Ride On Instruction / Assembling Manual

Ages 3 and up



Item No. B00KD3FJH8
(KL-40007BF-6V)

Adult Assembly Required.

Please read this manual carefully before giving this toy to your child.

This manual contains important information which will help you to assemble the unit includes safety instructions.

Please keep this manual for future purpose.

Packaging has to be kept since it contains important information.

Manufactured by : Kalee Children's Products Co, Ltd.

Made in China

Vehicle / Battery Specifications:

Age: Ages 3 and up

Maximum Capacity: 30 kgs / 66 lbs

Speed: 2.5-3.0km/h / 1.55-1.86mph

Battery Type: Sealed lead-acid rechargeable, 6Volt 7Ah

Charging time: Always charge the battery for 8-10 hours before first use and when recharging is needed. Never charge for more than 20 hours.

Power input for Charger: A/C 100-240 Volts, 60Hz

Power output to Battery: DC 7.5Volts, 1000mA



WARNING:

1. Use the toy only on flat surfaces, such as sidewalks, driveways or playgrounds. Do not ride the vehicle in dangerous places such as busy streets, roads or highways.
2. Never use near swimming pools or other bodies of water.
3. Never ride the vehicle in muddy or sandy areas. Never ride in hilly areas or on steep slopes. This vehicle was made to operate on dry leveled ground.
4. Never ride in the dark or in dimly lit areas.
5. Clean the vehicle only with a damp cloth and never submerge vehicle in water or spray with water directly from a hose.
6. Only one child should ride this vehicle at a time.
7. Do not exceed the recommended weight limit of 66 lbs.
8. To avoid suffocation of children please destroy all plastic bags after assembly of the vehicle.
9. If vehicle is equipped with a forward / reverse switch, never press this switch while vehicle is in motion. Always stop the vehicle before switching directions.
10. The charger used for the vehicle are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.
11. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

CHARGING CAUTIONS:

- The charger is not a toy. Do not allow children to play with the charger or to recharge the battery.
- Turn the power switch to "OFF" when charging.
- Before the first use, you should charge the battery for 8-10 hours. Do not charge the battery for more than 20 hours to avoid overheating the charger.
- It is normal for the charger to feel warm during charging. If the charger feel very hot, stop charging, unplug the charger and check the battery and charger.
- Use the charger in a dry location only and store in a dry location when not in use.
- Regularly check the charger, battery and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.







BATTERY SAFETY WARNING:

- Only use the battery and charger supplied by the manufacturer.
- Do not connect the battery terminals directly together. This will cause the battery to short-circuit.
- Never short-circuit the battery terminals or modify the electrical system. Alterations may cause a fire resulting in serious injuries.
- Remove batteries during long periods of non-use. Always remove batteries from the product. Dispose of batteries safely. Do not dispose of batteries in fires. The batteries may explode or leak.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- Recharge the battery fully before storage, then charge it every 3 months to extend the life of the battery.
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries.
- Non-rechargeable batteries are not to be recharged (for steering wheel)
Different types of batteries or new or new and used batteries are not to be mixed (for steering wheel)
- Exhausted batteries are to be removed from the toy (for steering wheel)
- Batteries are to be inserted with the correct polarity (for steering wheel)
- Rechargeable batteries are to be removed from thy toy before being charged (for steering wheel)

Caution:

This ride on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker is a self-resetting safety device which automatically "trips" and shuts down the operation of the vehicle if it is overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 25 seconds and allow the rider to resume normal operation.

Part List:

No.		Description	Qty
1		Body	1pc
2		Steering Wheel	1pc
3		Rearview Mirror Assembly	1pair
4		Front Frame	1pc
5		Screw (prefixed on Steering Wheel)	1pc
6		Nut (prefixed on Steering Wheel)	1pc



WARNING:

To reduce the risk of injury, adult supervision is required.

Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes and never allow more than 1 rider.



WARNING:

Contains small parts, sharp points and sharp edges. Adult assembly required.



WARNING:

Not to be used in traffic.



WARNING:

 
Choking Hazard! Contains small parts. Not for children under 3 years old!



WARNING:

This toy is unsuitable for children under 3 years due to its maximum speed.

How to assemble the vehicle:

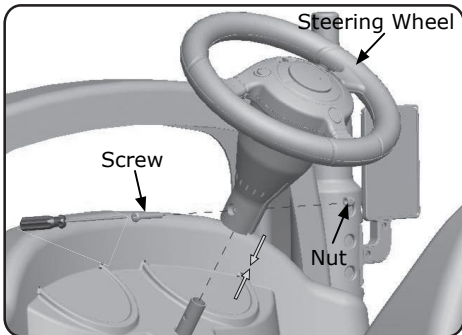


Step 1:

- Place the Steering Wheel (#2) onto the steering wheel column.
- Insert the Screw (#5) across the steering wheel column.
- Insert the Nut (#6), tighten the screw with screwdriver (not included).




 - Undo the three screws on the backside of the steering wheel.
- The music box is inside the steering wheel.
- Unscrew the screw on the music box cover.
- Open the cover and remove the button cell batteries, then insert the new button cell batteries.
- Place the cover and secure by the screw.
- Insert the music box in the steering wheel and secure with the 3 screws.

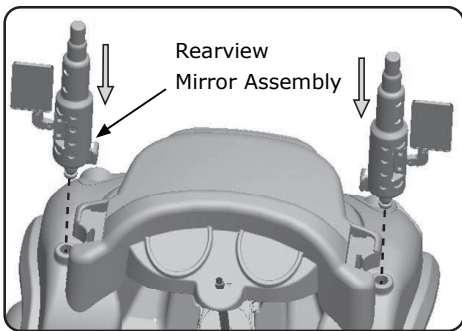


Step 2:

 - Attach the Rearview Mirror Assembly (#3) to the holes on the vehicle.

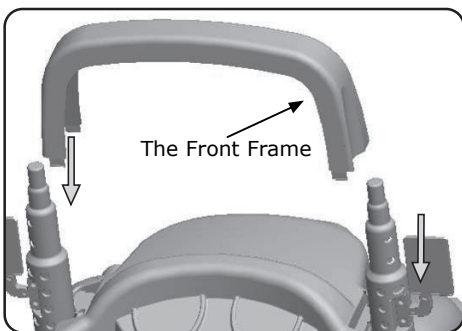


Step 3:

 - Attach the Front Frame (#4) onto the vehicle.

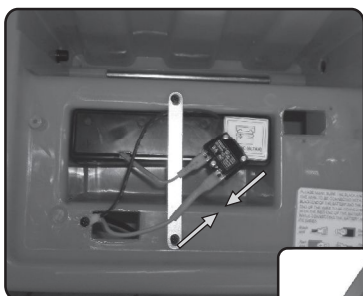

Step 4:

 - The battery is located under the seat. Unscrew the screws on the seat by screwdriver (not included), then open the seat. Connect the red plug with the fuse.

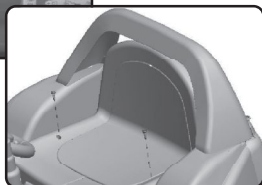


Operation of the Vehicle:

1. Make sure the battery is fully charged and the motor plug is connected to the battery plug.
2. Before using the vehicle, please connect the plugs which are located under the seat.
3. Press the direction switch to "F" and press the accelerator pedal, vehicle will move forward.
4. To stop the vehicle, remove your foot from the accelerator pedal. When stopped, press the direction switch to "B" then press the accelerator pedal, vehicle will move backward.


NOTE: Do not change directions while vehicle is in motion.

 Charging the Battery:

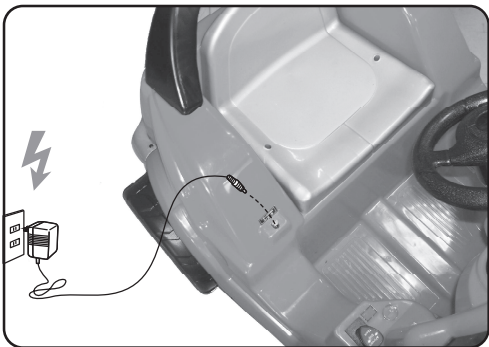

- The socket for charging the battery is located near the seat.
- Connect the charger plug into the DC jack, then plug the charger into a household outlet.
- Charge the battery for 8-10 hours. Never charge more than 20 hours.
- When the battery is fully charged, unplug the charger and store it in a cool and dry place.

 How to remove & insert the battery:

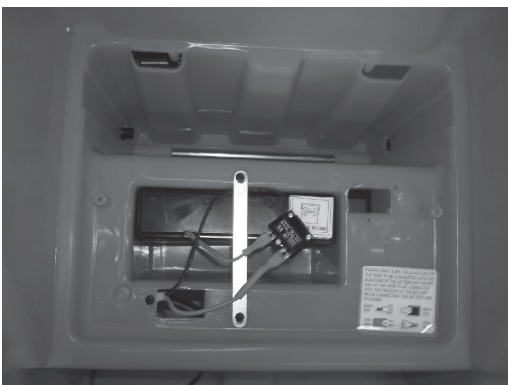

- Remove the two retaining screws from the battery securing bracket, then slide out the bracket to release the battery.
- Carefully remove the battery from the compartment by sliding it out into the footwell, ensuring you don't pull on any of the wires.
- Carefully release the two retaining spade connectors at the terminals of the battery and remove the battery from the footwell.
- Carefully connect the battery, ensuring the RED wire is connected to the POSITIVE terminal and the BLACK wire is connected to the NEGATIVE terminal of the battery.
- Slide the battery back into position, ensuring the wires are loosely positioned above the battery.
- Replace the battery securing bracket and resecure the retaining screws.
- The supply terminals are not to be short-circuited.

Maintaining your vehicle:

- It is a parents responsibility to check main parts of the vehicle before use. Regularly examine the vehicle for potential hazards, such as the battery, charge cable, cord and plug. Ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.
- Occasionally use a lightweight oil to lubricate moving parts such as the wheels and steering linkages.
- Keep the vehicle in an upturned position, do not overturn or incline it. It is recommended to store the vehicle indoors when not in use. If stored outdoors, the vehicle needs to be covered by a tarp for protection against weather elements.
- This toy should be kept away from fire. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt. While charging ensure all flammable liquids are well away from the vehicle.
- *ADULTS ONLY* to recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used.
- Use a soft, dry cloth to clean vehicle.
- *DO NOT* use any chemical liquids to clean the plastic surface of the vehicle.
- *DO NOT* wash the vehicle with soap and water.
- *DO NOT* drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- When not in use all electrical sources should be turned off. Press the power switch to the "OFF" position to turn the power off. Also disconnect the battery connection under the seat.
- Please do not change the structure of this product and circuit system.
- *DO NOT* use the vehicle for other purposes except riding.

Safety Precautions:

1. While riding, adult supervision is required at all times.
2. Always wear a helmet when riding.
3. Do not ride near roads or on the footpath.
4. It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15 degrees.
5. It is recommended to ride this vehicle on smooth surfaces only.
6. Do not use this vehicle outdoors when it is raining.
7. Make sure you come to a complete stop before changing directions from forward to reverse.
8. Don't allow children to operate the charger or play with the battery.
9. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to driver this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connections of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located the bottom of the vehicle.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Do not let any child touch the wheels or be near them when the vehicle is moving.

Trouble-Shooting:

1. If vehicle fails to move:
 - a) Make sure the battery wires are connected properly.
 - b) Recharge the battery, if necessary.
 - c) Check the fuse and replace if damaged.
2. If vehicle runs slowly:
 - a) Recharge the battery.
3. If the battery can not recharged:
 - a) Battery or charger may be damaged. Replace if necessary.

Customer Service:

If you have any missing or damaged parts or need assembly assistance, please contact our service center directly. Do not return this product to the retailer, they do not stock replacement parts.

Support Website: <http://support.bigtoysusa.com>
Support Phone: 715-955-4237

Manufactured by: Kalee Children't Products Co. Ltd.

ALL RIGHTS RESERVED.

BIGFOOT®, visit www.Bigfoot4x4.com

Licensee: Kalee Trading Company/Kalee Children's Products Co., Ltd.
Unit 816, Tower B, New Mandarin Plaza, 14 Science Museum Road,
Kowloon, Hong Kong

Made in China

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

