




Battery Operated Ride-On Vehicle

Assembly Manual & User's Guide

Street Chopper - Model No. 20033

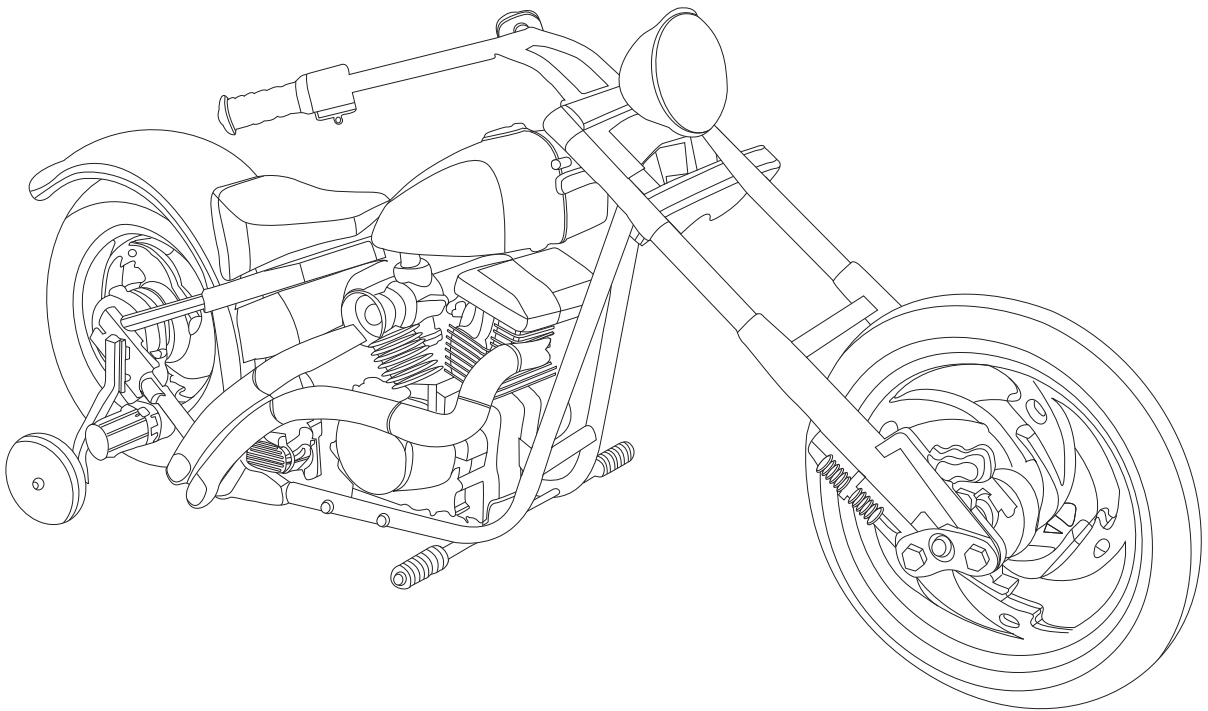

Adult Assembly Required

Please read this manual carefully before assembly and use.

Vehicle/Battery Specifications:

Ages: 3-6 Years

Vehicle Weight Limit: 66 Lbs

Max Speed: 4 mph

Battery Type: 1 Sealed lead-acid rechargeable, 12 Volt 7Ah.


Charging Time: Always charge the battery for 8-10 hours before first use and when recharging is needed. Never charge for more than 20 hours.

Battery Life: Approximately 300 charges


Power input for Charger: A/C 120 Volts 60hz

Power output to Battery: DC 14 Volts, 1000 ma


Parts List:

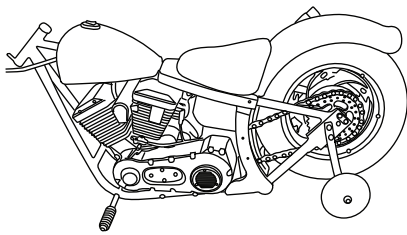

**1 Partially assembled
Body & chassis**

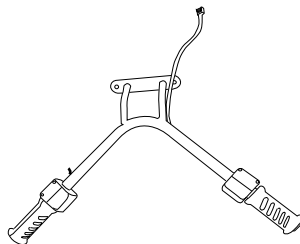


1 Handlebar Assembly

 


**1 Front Fork w/
1 Front wheel axle
1 Pivot bolt
2 Screws**




1 Front wheel

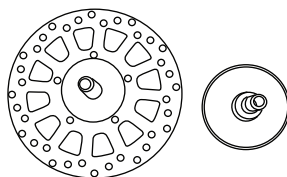

**1 Front wheel hub &
rotor**

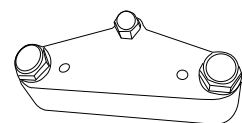

1 Guages

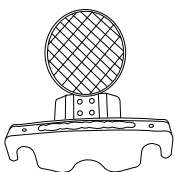


1 Headlight




2 Wrenches

Manufactured by: Kalee Children's Products Co., Ltd. Fujian China


How To Assemble The Vehicle:

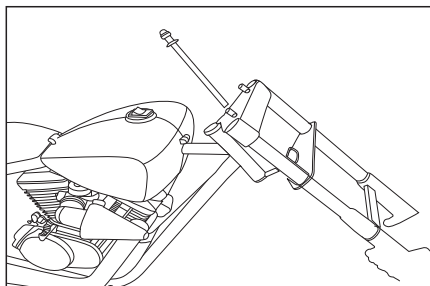


1. Locate the front fork assembly. Unbolt the center pivot bolt and remove. Position the fork on the front of the chassis, being sure to insert the metal tab on the chassis into the guide on the fork. Then insert the pivot bolt and tighten the hex nuts on both ends.

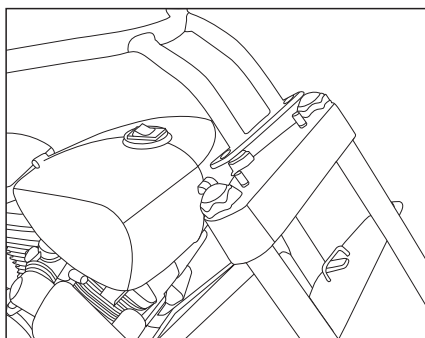



2. Remove the 2 hex nuts on the top of the fork. Now, put the handlebars over the 2 bolts and secure with the 2 hex nuts. Tighten with the socket wrench. Then position the gauge over the 2 handlebar and secure with the 2 black Phillips screws.

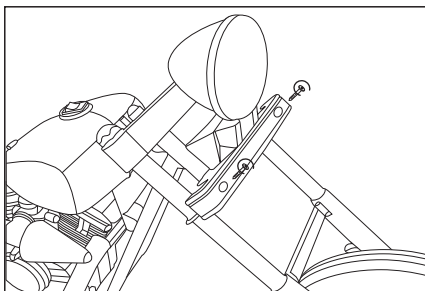

3. Attach the headlight assembly to the fork, then secure with the 2 small screws. Be careful not to overtighten.

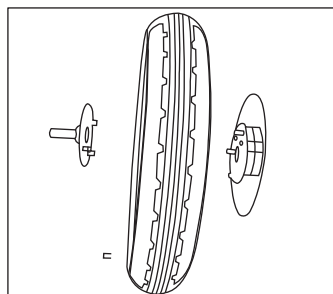


4. Using the 2 socket wrenches remove the front axle & washers from the fork. Attach the hub to one side of the wheel and the rotor to the other side. Put the wheel with the front hub & rotor between the 2 fork tubes. Insert the axle into the fork, place a washer on the axle then push through the wheel. Next place another washer on the axle, then push through the other fork tube. Secure with the 2 hex nut and tighten.

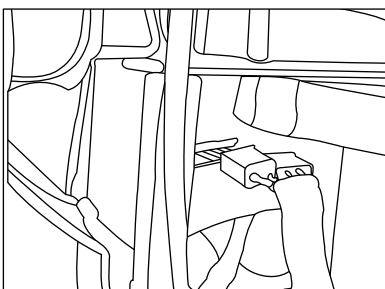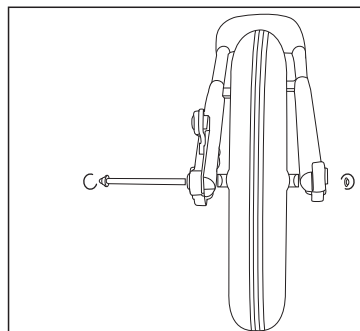

5. Find the 3-pin white plug coming from the handlebars and the 5-pin white plug coming from the front of the chassis. Match these two plugs to the plugs behind the headlight assembly and connect to the corresponding plug.


Operation Of Vehicle:

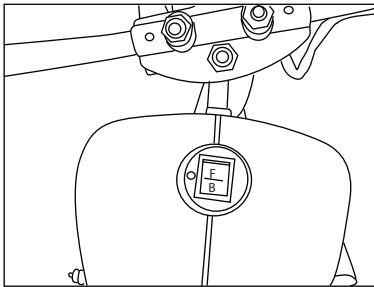

1. The vehicle is equipped with a three position toggle switch, marked F/B, located on the top of the gas tank. " F " to move the bike Forward and " B " to move in reverse. The middle position is off, in this position the bike will not move. It is important to note Do not change the direction switch while bike is in motion.
2. Twist the right handgrip back and cycle will move forward. While moving forward the headlight will light up. Release the handgrip and the bike stops and the lights turn off.

Charging The Battery:

The vehicle is shipped with the battery plug disconnected from the vehicle. Before the first use, charge the battery for 8-10 hours.

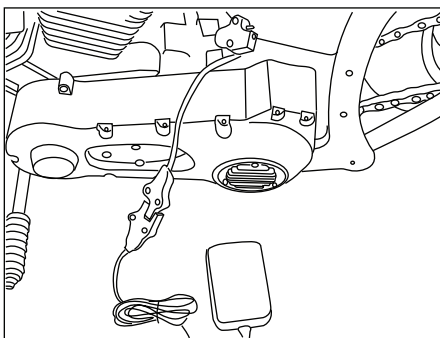

1. Under the seat is located a white plug (Battery) and a red plug (Vehicle). Disconnect these two plugs.
2. Then Plug the red plug on the A/C Charger into the white battery plug. Then plug the A/C Charger into a household outlet. Battery will start charging.
3. When the battery is fully charged disconnect the charger from the wall outlet then disconnect from the vehicle.
4. Reconnect the red vehicle plug to the white battery plug.

Troubleshooting:

1. If vehicle fails to move:
 - a. Make sure the battery wires are connected properly.
 - b. Recharge the battery, if necessary.
2. If vehicle runs slowly:
 - a. Recharge the battery.
3. If the battery cannot be recharged:
 - a. Battery or charger may be damaged. Replace as necessary.
4. If the vehicle still fails to operate properly, call our service center at 1-877-327-6098

Battery/ Charger Safety and Warnings:

- * **The Charger is not a toy. The battery should be charged by an adult only. Do not allow children to play with the charger or to recharge the battery.**
- * **Before the first use, you should charge the battery for 8-10 hours. Do not charge the battery for more than 20 hours to avoid overheating the charger.**
- * **It is normal for the charger to feel warm during charging, however if the charger feels very hot, stop charging by unplugging the charger. Check the battery and charger for damage.**
- * **When the vehicle begins to run slowly, recharge the battery.**
- * **To lengthen the life of the battery, you must recharge the battery after each use. You must also charge your battery if it has not been used for 30 days or more.**
- * **Use only batteries of the same or equivalent type as recommended by the manufacture.**
- * **Do not connect the battery terminals directly together, this will cause the battery to short circuit.**
- * **Charger should be examined regularly for damage to the cord, plug and other parts. If any damage is found, the charger should be repaired or replaced immediately. Do not use a damaged charger.**



Only use the charger specified by the manufacturer.

Caution:

Your ride on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker is a self-resetting safety device which automatically "trips" and shuts down the operation of the vehicle if it becomes overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 10 seconds and allow the rider to resume normal operation.

Vehicle Safety Warnings:



WARNING:

To reduce the risk of injury, adult supervision is required.

Never ride in roadways, near motor vehicles on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes and never allow more than one rider.

- * Use the toy only on flat surfaces, such as inside your house, back yard or playground. Do not ride the vehicle in dangerous places such as busy streets, roads or highways.
- * Never use near swimming pools or other bodies of water.
- * Never ride the toy in the mud or sandy areas, hilly areas or on steep slopes. This vehicle was designed to operate on dry level ground.
- * Never ride in the dark or in dimly lit areas.
- * Clean the vehicle with a damp cloth and never submerge vehicle in water or spray with water from a hose.
- * Only one person should ride this vehicle at a time.
- * Do not exceed the recommended weight limit.
- * Please keep these instructions for reference about usage, storage and safety guidelines.
- * If vehicle is equipped with forward and reverse switch, never press this switch while vehicle is in motion. Always stop the vehicle before switching directions



WARNING:

Contains small parts, sharp points and sharp edges.
Adult assembly is required.



WARNING:

Choking Hazard - Small Parts.
Not for children under 3 years of age.