Exhausted batteries are to be removed from the toy. Rechargeable batteries are only to be charged under adult supervision.

Warning.Not to be used in traffic. This toy has no backe.

The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

Batteries are to be inserted with the correct polarity. Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the toy before being charged.

The instruction shall state that transformers or battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

Warning. This toy has no brake.

Warning.Protective equipment should be worn.


Not to be used in traffic.

Warning. This toy is unsuitable for children under

3 years due to its maximum speed.

### **OPERATION MANUAL**

**ZP3999** (A/B)

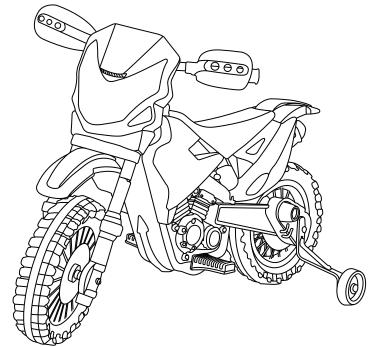

Our	products	are	suital	ole 1	for t	the 1	foll	owii	ng :	stand	lard	
	000075	00	10005									

☐ GB6675,GB19865

ASTM-F963,CPSIA

EN71 AND EN62115

### 1. Directory:

Before use
Specification
Safety Precautions
Assembly diagram
Notice when using
Fuse
Charging
Maintenance and repair
Trouble Shooting

### 2 Before use:

Please read carefully before using our product manual. which tells you the detailed installation and correct use, Then can avoid damage and injury caused by improper operation. Particularly important is that it tells you a lot about safety precautions, Please memorize these and guide your child with patience. Please place the instructions in easily accessible place for future reference.

### 3. Specification:

external dimensions	107x53x70CM	Power Mode	Rechargeable		
User's proper age	suitable for children around 3-8years old	Fuse Spec	Fuse Spec. Self -resetting Fuse		
Loading limitation	20 KGS	Charging Time	8-12 hours.		
Speed	2.5-3 km/hr	Power life	280 times charging.		
Battery Spec	6V, 4.5AH	Charging Spec	6V 500MA		
,					

### 9、Care and maintenance:

- (1). Adults should check regularly (once every two weeks suggested), wires, plugs, electrical, housing, steering systems, fastening is normal or not, If there is any problem, then stop use until the fully restored
- (2). Clean vehicles please use soft, dry cloth to wipe, can not use water or fuel cleaning, that will lead to corrosion switch and caused switch failure. (3). This product cannot store in the high-temperature places or near the fire, or in
- moist places, The product should be covered in the snowy and rainy days... (4). Charge the battery fully if you will store it for a long time, then charge it every
- 3 month, in this way you can extent the lifetime of the battery. (5). Stop using, pls take off the battery from the motorcycle and make the switched on "OFF" position. Also cut off the power. Keep the battery in proper place.
- (6). When maintenance, donnot revise the motorcycle's circuit and structure. The key parts should be maintained and guided by the professional staff.
- (7). Don't recharge the non-rechargeable batteries, don't mix the old and new or different types of batteries. Pay attention to the Positive and negative. (8). In the unstable supply voltage region. We recommended to install voltage stabilizer to protect the battery

#### 10 Trouble Shoot: The vehicle does not move:

- 1. Check the power's positive and negative cord is plugged firmly. 2. Check forward and back switch is in neutral position switch or not.
- (Middle of the switch is neutral position) 3. Fuse melted or jump off.

Donnot allow children play the battery.

- 4. Like the picture, check the charger is pluging into the charging hole. If yes, the motorcycle will cut off automatically. After pluging off the charger, then can use. 5. Foot switch or manual button is stuck down then cannot press?
- 6. Whether there is debris stuck wheels
- The vehicle moves slowly:
- 1. Whether battery power is sufficient, If so, need timely charge. 2. Whether there is debris stuck wheels.
- 3. Whether the vehicle is overloaded.
- 4. Whether the charger is broken then the battery cannot be charged.
- The battery cannot be fully charged:
- 1. Check the charger is ok or not. When charging, the charger will be warm is normal. 2. Checkthe battery is ok or not.
- 3..Check the charger or the battery connection is loose or not.


## 7. Fused tube:

The motorcycle use glass tube fuse like Picture

- When overloading or improper use, the fuse will be cutted automatically for 10-20 seconds. And then will connect the power automatically. (1). The maximum weight limited of the motorcycle is 20KG.
- (2) Not stall the car running or heavy trailer behind. (3). May not liquid immersion, it may cause the short circuit.
- (4). Donnot revise the motorcycle's circuit or the structure.

### 8. Fused tube: (1). Like the below picture, put the charger into the motorcycle's charing hole.

(2). Like the picture, The power plug into the matched stable AC power. Attention when charging:

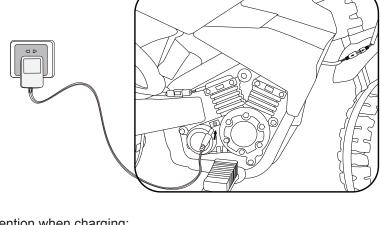

Attention when charging: 1. Adults should do the battery charging,

- cannot charge over 15 hours.
- First using , fully charged, need to charge another 4-6 hours. 3. Charge the battery if the vehicle runs slower, can charge 8-12 hours.But
- charger and battery. 5. When charging, cannot upside down the battery. 6.Before charging, check the charger ,battery and the plug is ok or not.If

4. Cannot open or decompose the battery and charger, should use the matched

- broken, no use. After repaired, then can use.
- 7. Charge the battery fully if you will store it for a long time, then charge it every 3 month, in this way you can extent the lifetime of the battery.


### 4. Cautions For Safety:

- (1). The product must be assembled by adults. Before use check whether the adult assemble correctly according to the instructions.
- (2). To avoid injury to small parts, children under 3 years old prohibited. (3). Children should stay away from the plastic bags, prevent children from covering the head leading to choking hazard
- (4). When using, Children should wear safety helmets and must be guarded and guided by adults, and not to leave the child alone to avoid accidents. (5). The motorcycle is for one person. The maximum weight limited of the
- motorcycle is 20KG. suitable for over 3 years to 8 years old children, Non-overloading.
- (6). The motorcycle should drive on the plat surface It is prohibited to drive on streets, slopes or any other dangerous places.
- (7). When the motorcycle moving, user should not be free to turn forward, backward switch, After the motorcycle stopped, then can switch the forward
- and backward (8). Do not reverse push and lateral pull the motorcycle in the normal driving. to prevent the rollover risk.
- (9). The battery charger to be operated by an adult, do not let children charge the battery.
- (10). Do not directly wash the motorcycle with water or rain the motorcycle. To prevent water damage to the motor circuit
- (11). Adults should check regularly (once every two weeks suggested), wires, plugs, electrical, housing, steering systems, fastening is normal or not, If there
- is any problem, then stop use until the fully restored. (12). The motorcycle battery and the charger is not a separate toy, donnot. (13). Please use the matched battery and charger, and a stable charging voltage
- to ensure safe when charging, and extend battery life. (14). Spare parts exchange should be operated by an adult, because the battery is very heavy, and the internal acidic electrolyte, if any leakage should avoid contact with liquid, and need a professional disposition. If accidental contact with the electrolyte, it is timely at least 15 minutes rinse with cold water and seek medical treatment.
- (16) This product cannot store in the high-temperature places or near the fire, prevent plastic parts melt, charging away from flammable materials to prevent fires
- (17). Shall not use the different specifications fuse.

(15). Avoid the short circuit of the power, to prevent the risk of burning.

- (18). Don't recharge the non-rechargeable batteries, don't mix the old and new or different types of batteries. Shall not be casually discarded, attention to
- environmental protection. (19). No using or long-term no use the motorcycle, please pull out the battery on the red line, the switch is "off" position, to ensure circuit safety.
- (20). Donnot exposure the motorcycle to the sun or using the motorcycle in the
- (21). Keep the package bags in the proper place for further use because there is important information on it. (22). Keep the package bags in the proper place for further use because there is
- important information on it.


# 5. Product assembly chart:

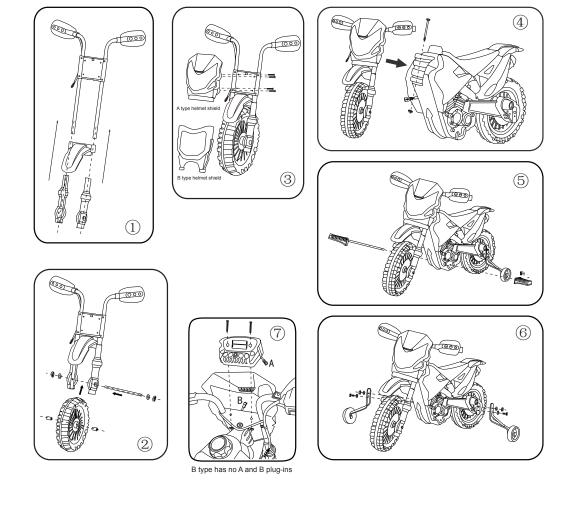

# 6. THE USE OF INFORMATION:

(1). Before using it for the first time, ,same as the Picture 1 In A area, find the plug-ins on the halter and on the motorcycle body. And tight the plugs. (2). This motorcycle has the music function, We use the dry battery for the music. Ref the Pic

1 In B Area, find the battery box on the motorcycle body and add 2 dry battery, with the spring, is the negative pole. Another side is the positive pole. Donnot put the wrong side to avoid burning the circuit board. If no use for long time, then take off the dry batery and keep it properly. (3)Refer the picture 2, the position with arrow is the charger hole. Charge the battery if the vehicle runs slower than normal. Charge the battery for 8-12 hours. But cannot over 15 hours. It is normal that the power charger and the battery become warmer while the battery is on charging. (4). Function information, like Picture Function: 1. Start-up mode is to press the start switch. To brake, just release the start switch.

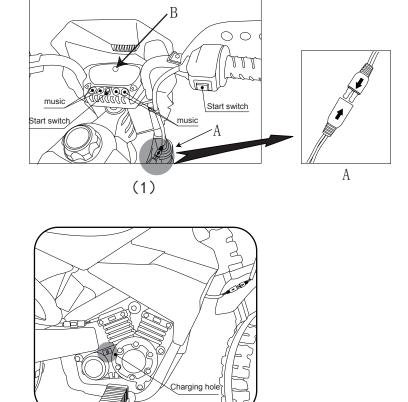

(2)