

Guide Book

- R/C controls forward/backward and left/right
- Music
- Volume adjustment and MP3
- Power display
- Forward and backward
- High and low speed
- Bluetooth
- USB
- TF card
- MP4(Optional)

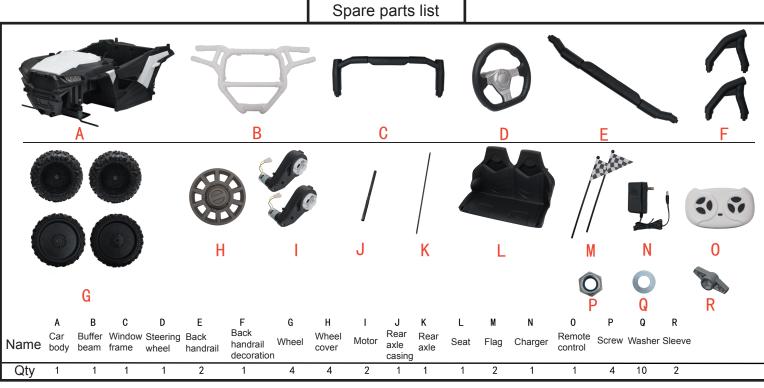

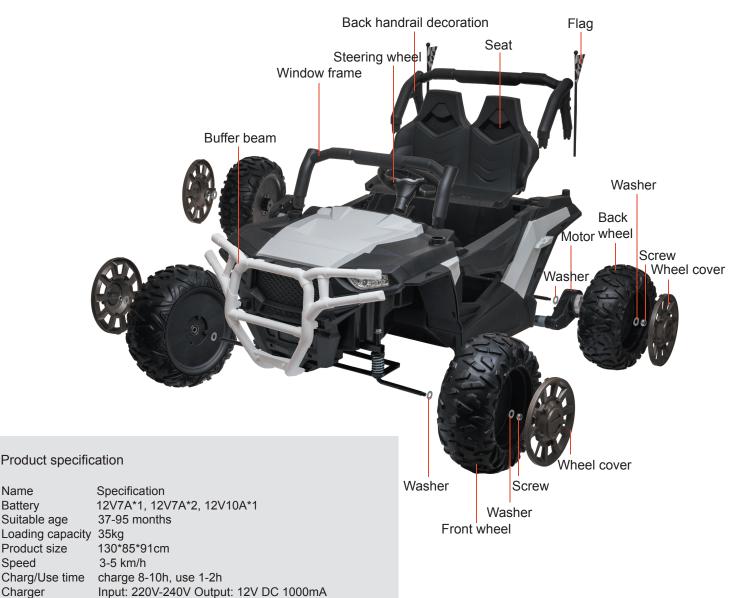



Remote control AAA1.5V


Name Battery

Speed


Charger

(Input: 220V-240V Output: 24V DC 1000mA is optional)

Function show

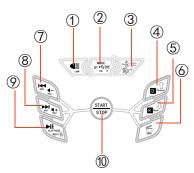

Picture for reference only, please check your buying.

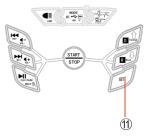

12V Console

24V Console

Button function	
1 Light	⑦Music switch/Volume -
② Multifunction	8 Music switch/Volume +
③High/low speed Music	
④ Forward	10 Power
5 Backward	1 Bluetooth
6 MP4	

Remote control function and explaination

- Do not swift forward/backward button when car is driving, or will damage the motor.
- Remote control can be used normally Speed when battery assembled.
- Remote control should be used
- under adults' supervision.
- Remote control is prior to
- man control.

Backward-



How to adjust R/C frequency:

Long press forward and backward Light indicator

button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

Remote control battery operation

- Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.
- New and used batteries can not be used mixed.
- Do not insert batteries into wrong polarity, or will be short-circuited. • Non-rechargeable batteries can not be recharged. Exhausted
- batteries should be replaced by adults.
- The exhausted battery must be handled and operated properly by adults only. Do not be played by children.