


MotoTec Cruiser 500w 48v Electric Scooter FAST installation

1, Handlebar installation

- (1) Insert the handlebar tube into the fork tube, see below picture
- (2) Screw the handlebar bolt to tight

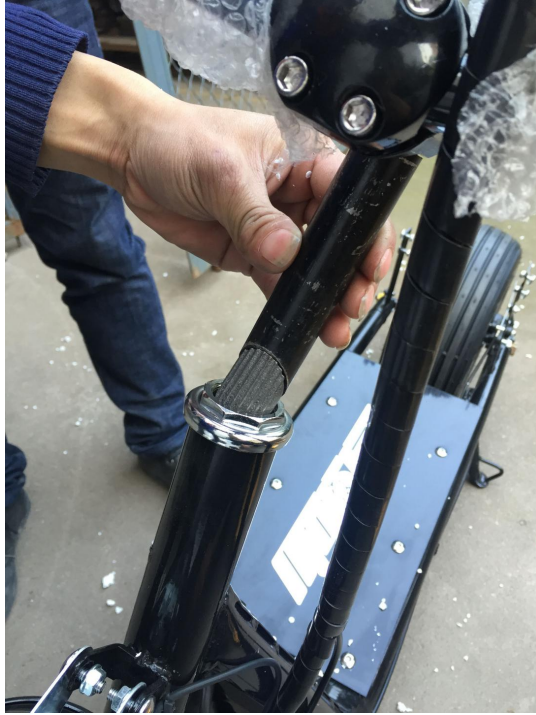

- (3) Screw tight the four bolts, see below




2,front light installation

(1) Screw tight the bolt



3, Dirt cover installation

(1) Take off the bolt

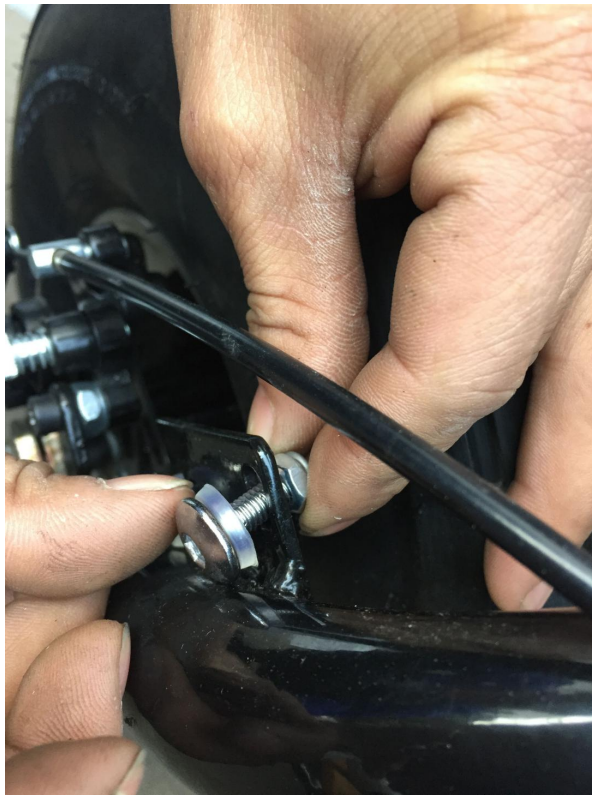

(2) Please note the position of the rubber washer, screw tight the bolt



4, seat installation

(1)Bottom up the seat and install the tube plate to the seat with four bolts, see below

